





ASSEMBLY

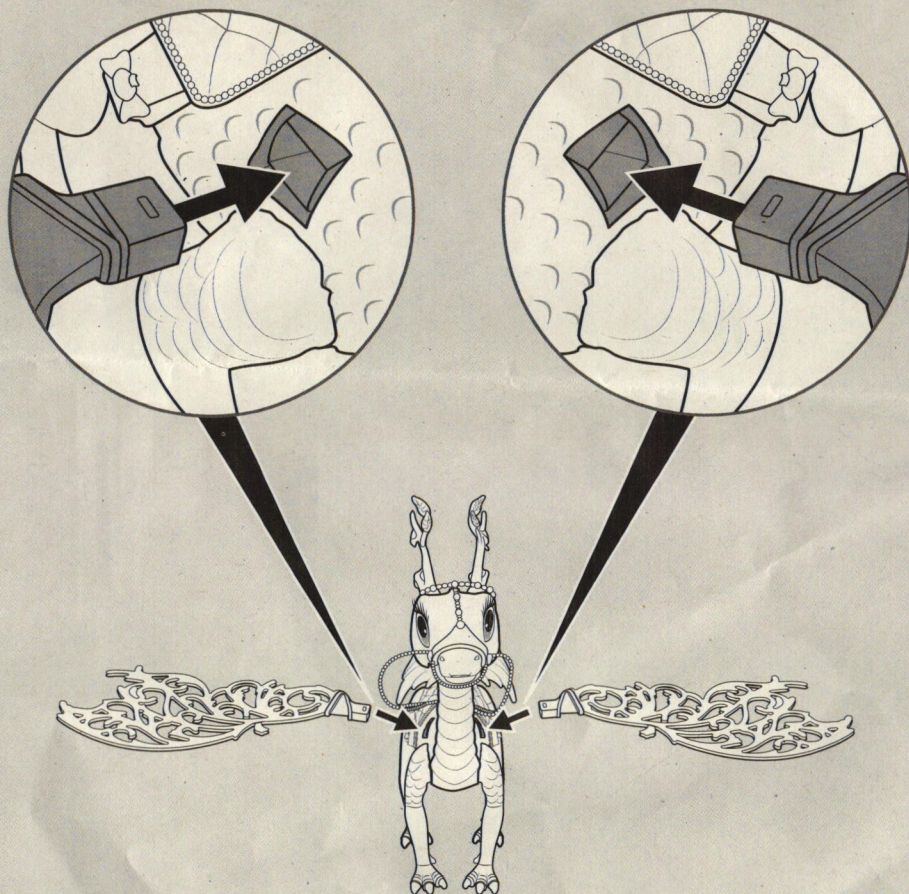


LET'S PLAY




a.

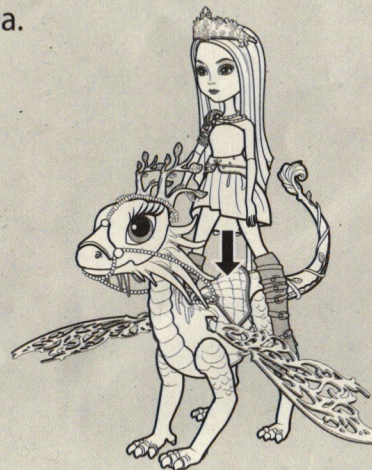

b.

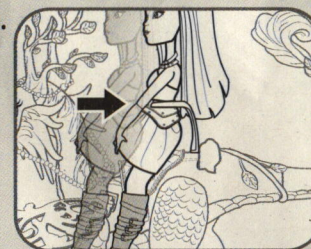


c.

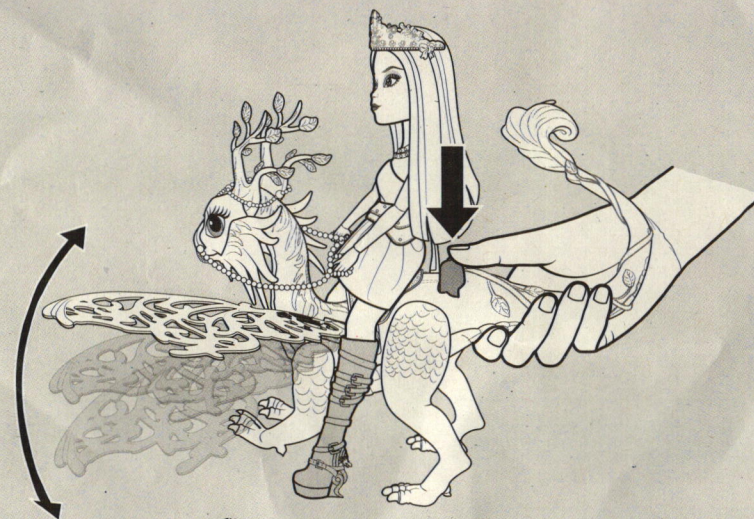

 Press button to flap wings!



LET'S PLAY

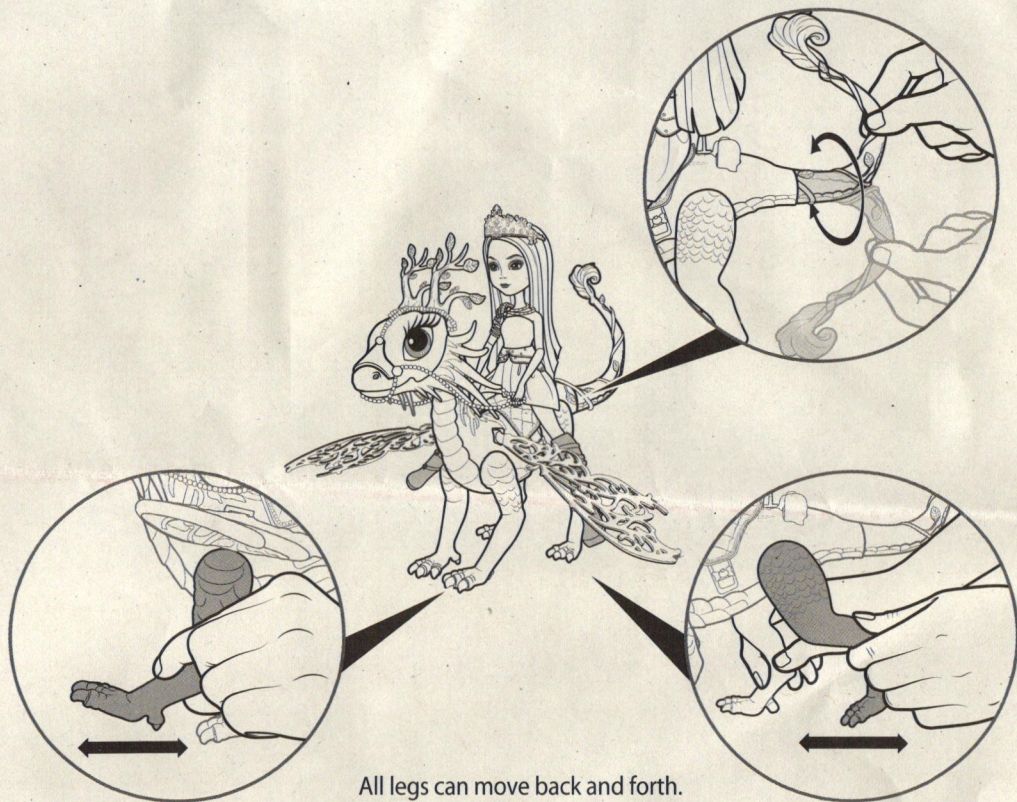

All legs can move back and forth.

Note: For best performance, hold toy with one hand and move legs or rotate tail with the other.

CONSUMER INFORMATION

Need Assistance? Visit service.mattel.com or call 1-800-524-8697 (US and Canada only).

SERVICE.MATTEL.COM

Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500. Diimport & Diedarkan Oleh: Mattel Southeast Asia Pte. Ltd., No 19-1, Tower 3 Avenue 7, Bangsar South City, No 8, Jalan Kerinchi, 59200 Kuala Lumpur, Malaysia. Tel: 03-78803817, Fax: 03-78803867.




INSTRUCTIONS



6+



CONTENTS

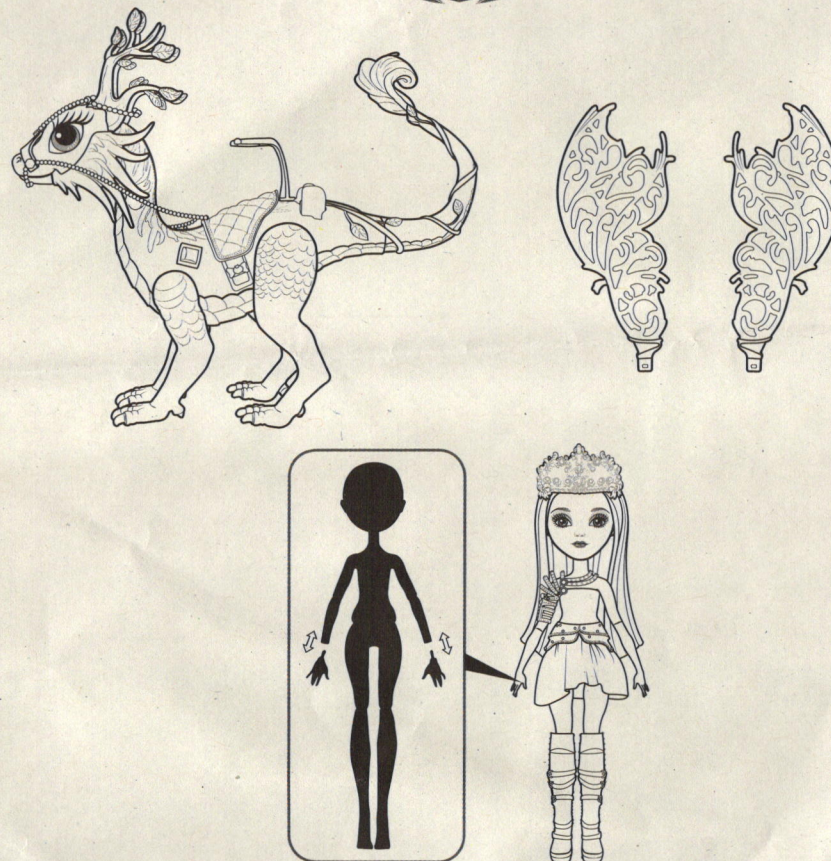

WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 years.

Please remove everything from the package and compare to the contents shown here. If any items are missing, please contact your local Mattel office. Keep these instructions for future reference as they contain important information.

©2015 Mattel. All Rights Reserved.

DKM76-0970
DOM-1100717614